# **Ultra-compact Amplifier Built-in Type**

# Ultra-compact, Amplifier Built-in Type


#### Feature

- Minimizes installation space with ultra-compact size
- Size: Through-beam type (W7.2×H18.6×L9.5mm) Retroreflective type, convergent reflective type (W7.2×H24.6×L10.8mm)
- Sensing min. Ø0.15mm of sensing target (Convergent reflective type)
- 1m of Max. sensing distance (Through-beam type)
- Check the sensing spot position due to visible light source. It helps to decide the installation place.
- Adopts clear operation indicator (red) and stability indicator (green). They can help to check the operation status instantly at the narrow

Protection degree IP67 (IEC standard)

Please read "Caution for your safety" in operation manual before using.



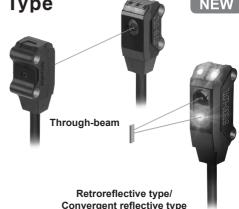

Convergent reflective type

# ■ Specifications

	Specifica	ations								
Model	NPN open collector output	BTS1M-TDTL	BTS1M- TDTD	BTS200- MDTL	BTS200- MDTD	BTS30-LDTL	BTS30-LDTD	BTS15-LDTL	BTS15-LDT	
Š	PNP open collector output	BTS1M- TDTL-P	BTS1M- TDTD-P	BTS200- MDTL-P	BTS200- MDTD-P	BTS30- LDTL-P	BTS30- LDTD-P	BTS15- LDTL-P	BTS15- LDTD-P	
Sensing type		Through-beam type		Retroreflective type		Convergent reflective type				
Sensing distance		1m		10 to 200mm (MS-6)		5 to 30mm (non-glossy white paper 50×50mm)		5 to 15mm (non-glossy white paper 50×50mm)		
Sensing target		Opaque material of max. Ø2mm		Opaque material of max. Ø27mm		Opaque material, Translucent materials				
Min. sensing target		Opaque material of Ø2mm		Opaque material of Ø2mm <sup>×1</sup> (sensing distance 100mm)		Ø0.15mm (sensing distance 10mm)				
Hysteresis distance				_		Max. 15% of maximum sensing distance				
Response time		Max. 1ms								
Power supply		12-24VDC ±10% (ripple P-P: max. 10%)								
Current consumption		Max. 20mA (in case of through-beam type, this value is for each emitter and receiver)								
Light source		Red LED (650nm)								
Operation mode		Light ON     Dark ON     Light ON     Dark ON     Dark ON     Dark ON <npn collector="" open="" or="" output="" pnp=""></npn>								
	ntrol output	·Load voltage:	max. 26.4VDC	·Load current	t: max. 50mA ·Re			, max. 2V (PNF	P)	
Protection circuit		Power reverse polarity protection, Output short-circuit over current protection								
Indicator		Operation indicator: Red, Stability indicator: Green								
Insulation resistance		Max. 20MΩ (at 500VDC megger)								
Noise strength		±240V the square wave noise (pulse 1/45)								
Dielectric strength		1,000VAC 50/60Hz for 1 min.								
Vibration		1.5mm amplitude at frequency of 10 to 55Hz (for 1 min.) in each X, Y, Z direction for 2 hours								
Shock		500m/s² (approx. 50G) in each X, Y, Z direction for 3 times								
nent	Ambient illumination	Sunlight: max. 10,000tx, Incandescent lamp: max. 3,000tx (receiver illumination)								
Environment	Ambient temperature	-20 to 55°C, storage: -30 to 70°C								
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH								
_		IP67 (IEC standard)								
Ma	terial				SUS304, Bolt: S					
Cable		Ø2.5mm, 3-wire, length: 2m (emitter of through-beam type: Ø2.5mm, 2-wire, length: 2m) (AWG 28, core wire diameter: 0.08mm, no. of core wire: 19, insulator diameter: Ø0.9mm)								
Accessory		Bracket A×2EA, Sub-bracket Reflector (MS-6),Bracket A, for through-beam type×2EA, Sub-bracket for reflective type, M2 bolt×2EA Bracket A, Sub-bracket for reflective type, M2 bolt×2EA						2 bolt×2EA		
	oroval	CE								
We	ight <sup>ж2</sup>	Approx. 97g (a	approx. 45g)	Approx. 70g	(approx. 25g)	Approx. 68g (a	approx. 25g)			
_				<del></del>		111 01	11 07			

x1: It will vary by the installation environment and sensing conditions.

Please refer to the '@ Conditions of min. sensing target and installations (retroreflective type)'.

When using reflective tapes, the Reflectivity vary by the size of the tape.

Please refer to the 🔳 Reflectivity By Reflective Tape Model' table before using the tape.

x2: The weight includes packaging. The weight in parentheses is for unit only.

\*The temperature or humidity mentioned in Environment indicates a non freezing or condensation environment

(C) Door/Area Sensors

(D) Proximity Sensors

(F) Rotary Encode

(I) SSRs / Power Controllers

(N) Display Units

(P) Switching Mode Power Supplies

(Q) Stepper Motors

Logic Panels


A-13


# **BTS Series**

#### ■ Feature Data

#### **O** Through-beam

#### • BTS1M-TDTL / BTS1M-TDTL-P

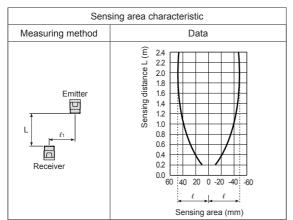


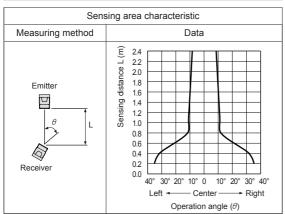

# Convergent reflective typeBTS30-LDTL/BTS30-LDTL-P


• Convergent reflective type

+ 12-24VDC

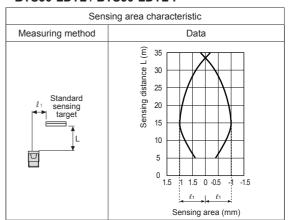


#### Connections

#### • Through-beam

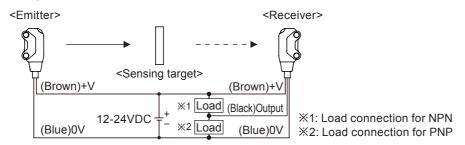

Retroreflective type

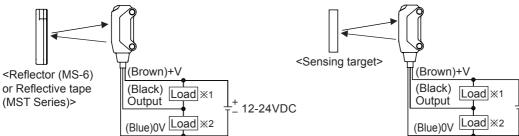


A-14 Autonics


# **Ultra-compact Amplifier Built-in Type**

## **■** Control output diagram

#### • NPN open collector output

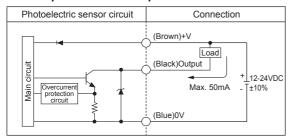

#### • PNP open collector output

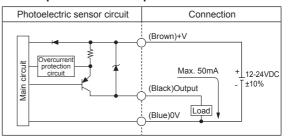

(C) Door/Area Sensors

(D) Proximity Sensors

(F) Rotary Encoders

(G) Connectors/ Sockets

(I) SSRs / Power Controllers

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors


(R) Graphic/ Logic Panels

## Operation Mode


Light ON	Dark ON		
Received light	Received light		
Interrupted light	Interrupted light		
ON	ON		
OFF	OFF L		
ON	ON		
OFF	OFF L		
	Received light Interrupted light ON OFF ON	Received light	

#### Dimensions

• Through-beam

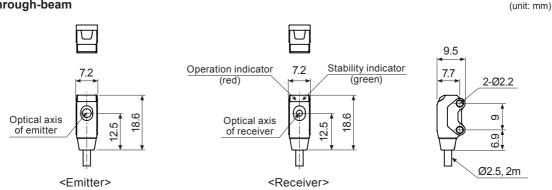


#### • Retroreflective type / Convergent reflective type

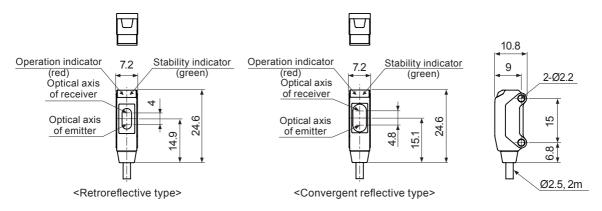


A-15 **Autonics** 

# **BTS Series**


#### Bracket A

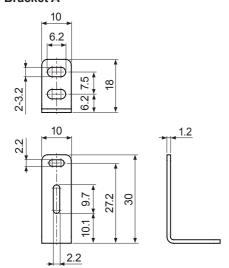


• Sub-bracket for through-beam type

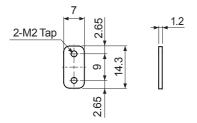

• Reflector (MS-6)

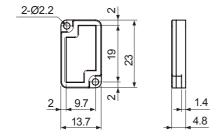


• Reflective tape (sold separately)

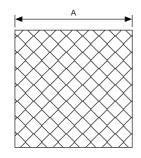




• Bracket B (sold separately)

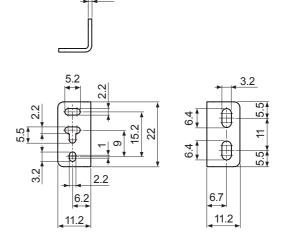


• Sub-bracket for reflective type

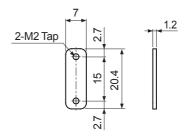

	(unit: mm)
	A
MST-50-10	□50
MST-100-5	□100
MST-200-2	□200

# **Ultra-compact Amplifier Built-in Type**

## Operation Timing Diagram

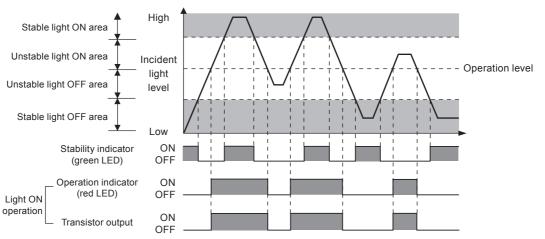


X The waveforms of "Operation indicator" and "Transistor output" are for Light ON operation. They are reversed for for Dark ON operation.

### Mounting And Sensitivity Adjustment

#### O Installation


Use M2 bolts to install this sensor, and keep the tightening torque under  $0.3\mbox{N.m}$ 

 Please use with caution, as impact against firm objects or excessive bending of cables may cause damage to the waterproof function.

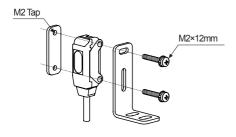


#### 

  Make sure that the sensing side of this sensor is parallel to the surface of each object.



2)Make sure to install the sensor after carefully considering the moving direction of the sensing objects. Refer to the illustration below:

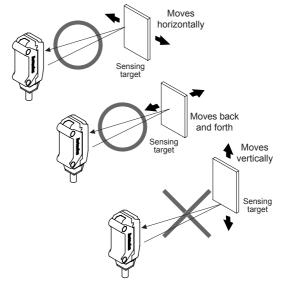

(A) Photoelectric Sensors

(B) Fiber Optic

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

> (F) Rotary Encoders

Connectors/ Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

Controllers

Counters

K) Timers

> .) anel eters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices


> (T) Software

Autonics A-17

#### Optical axis adjustment
 
#### • Through-beam type


Set the emitter and the receiver facing each other. Adjust the emitter or the receiver up, down, left, right and fix the unit at the center position where the stability indicator is operating.



#### • Retroreflective type

Place the sensor and the reflector (MS-6) or reflective tape facing each other. Adjust the reflector up, down, left, right and fix the reflector at the center position where the stability indicator is operating.

Make sure that the sensing side of the sensor is parallel to the surface of the reflector.

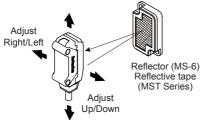


※Please use reflective tape (MST Series) for where a reflector is not installed.

#### Convergent reflective type

Place the sensing target, then adjust the sensor up, down, left, right and fix the sensor at the center position where the stability indicator is operating.


Make sure that the sensing side of the sensor is parallel to the surface of each object.

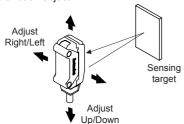

#### © Conditions of min. sensing target and installations (retroreflective type)

When installing the retroreflective photoelectric sensor, be sure to check the moving direction of sensing targets. Please refer to the [Figure 1, 2].

As the [Figure 3], please consist the center between the sensor and the reflector (MS-6) or reflective tape, and check the stable Light ON operations (operation (red)/ stability (green) indicators turn ON). Min. sensing target is detected 100mm away from the sensor (example).

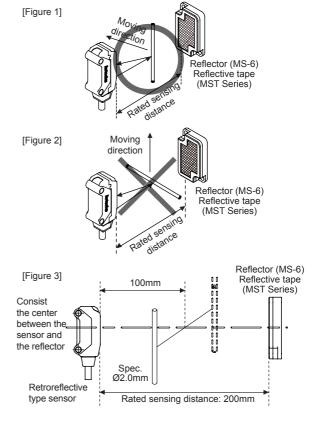

\*\*The size of minimum sensing target will vary by the installation environment of the reflector (MS-6) and the sensing position and material of the sensing target.

#### Reflectivity By Reflective Tape Model

MST-50-10 (50×50mm)	95%
MST-100-5 (100×100mm)	100%
MST-200-2 (200×200mm)	100%

XThis reflectivity is based on the reflector (MS-6).

※Reflectivity may vary depending on usage environment and installation conditions.

The sensing distance and minimum sensing target size increase as the size of the tape increases.

Please check the reflectivity before using reflective

※For using reflective tape, installation distance should be min. 20mm.

A-18